

KEY ASSIGN

FLANGER

SYNTHESISER

BRASS

STRINGS

POWER ON

ASSIGN MODE

TOTAL TUNE

SYNTH

BRASS

BRASS

KBD SPLIT

SPEED

FEEDBACK

OCTAVE

WAVE FORM

OCTAVE

INTENSITY

MANUAL

MANUAL

OCTAVE

PW/PWM

WAVE FORM

PWM SPEED

OCTAVE

DETUNE

VCO1

VCO2

CUTOFF FREQ

RESONANCE

EG INTENSITY

EG INTENSITY

VCF

VCF

ATTACK

DECAY

SUSTAIN

RELEASE

ATTACK

DECAY

SUSTAIN

RELEASE

VCA EG

VCA EG

ATTENUATOR

AUTO DAMP

ON

OFF

CUTOFF FREQ

RESONANCE

EG INTENSITY

EG INTENSITY

VCF

VCF

ATTACK

DECAY

SUSTAIN

RELEASE

ATTACK

DECAY

SUSTAIN

RELEASE

EG

EG

SILENCE NOTE

TRIGGER SELECT

EG

EG

ATTACK

HIGH

LEVEL

DELAY TIME

SPEED

ATTACK

LOW

LEVEL

DELAY TIME

SPEED

ENVELOPE

EQUALIZER

BOWING

VIBRATO

FILTER

ENVELOPE

EQUALIZER

BOWING

VIBRATO

FILTER

VOLUME

PHONES OUT

VOLUME

PHONES OUT

INTENSITY

DELAY VIBRATO

SYNTH

BRASS

STRINGS

VOLUME

OUTPUT

MIXER

OUTPUT

LOADING

TAPE ENABLE

WRITE

MANUAL

TO TAPE

FROM TAPE

VERIFY

ERROR/CANCEL

A

B

C

D

1

2

3

4

5

6

7

8

PROGRAMMER

PROGRAMMER

VOLUME

OUTPUT

MIXER

OUTPUT

16'

8'

OCTAVE

OCTAVE

MULTIPLE

TRIGGER

TRIGGER

SELECT

VOLUME

OUTPUT

MIXER

OUTPUT

16'

8'

4'

OCTAVE

OCTAVE

BOWING

VIBRATO

ENSEMBLE

OFF

OFF

OFF

TOTAL VOLUME

VOLUME

TOTAL VOLUME

VOLUME